

MOUNTING PROCEDURE


KIT SAVE CARTER
APRILIA TUONO V4

AT1101

WWW.BARRACUDAMOTO.COM

KIT

X2. THICKNESS
X1. BOLT 10X140
X1. BOLT 10X120
X2. PVC HEAD
X2. BASE CRASH PAD

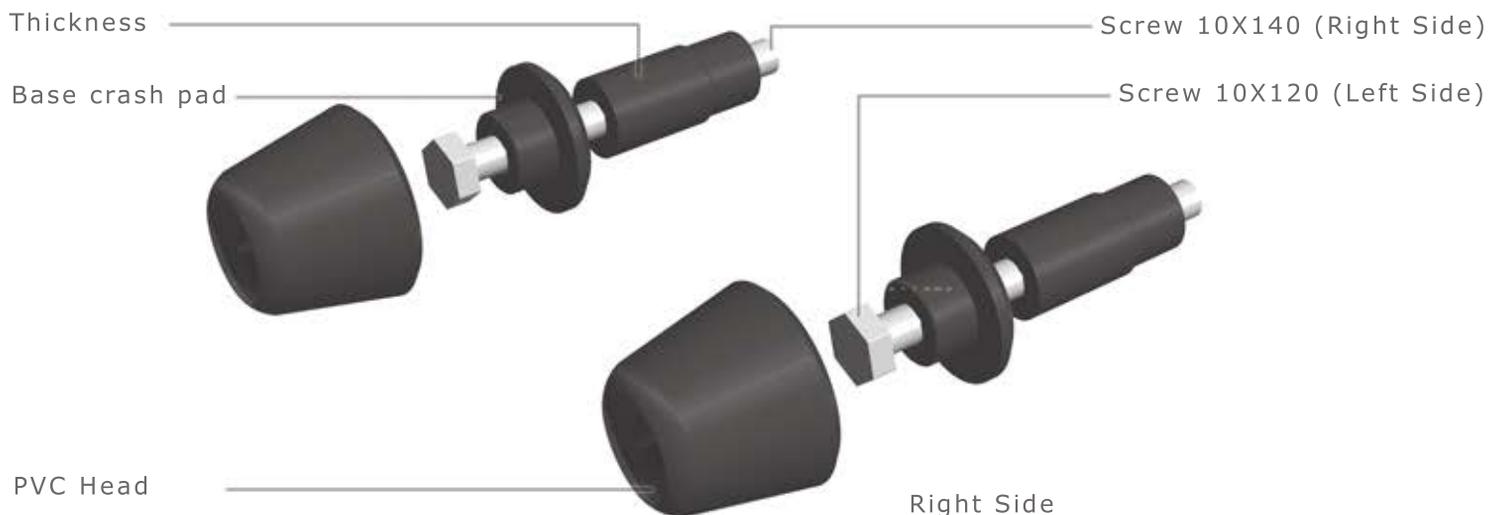

APPROACH POINT TO THE MOTORBIKE



BEFORE START IN THE MOUNTING PROCESS, FIND THE FIXING POINT ON THE MOTORBIKE.

USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED INTO THE PICTURE TO OBTAIN THE CORRECT PROJECTION FROM THE MOTORBIKE CRASH PAD.

FIX THE PVC HEAD OF CRASH PAD ONLY AFTER FIX AND LOCK ALL THE KIT.